


## AV 100

### **TIMING ADVANCE PROCESSOR FOR DISTRIBUTOR WITH BREAKER POINTS .**

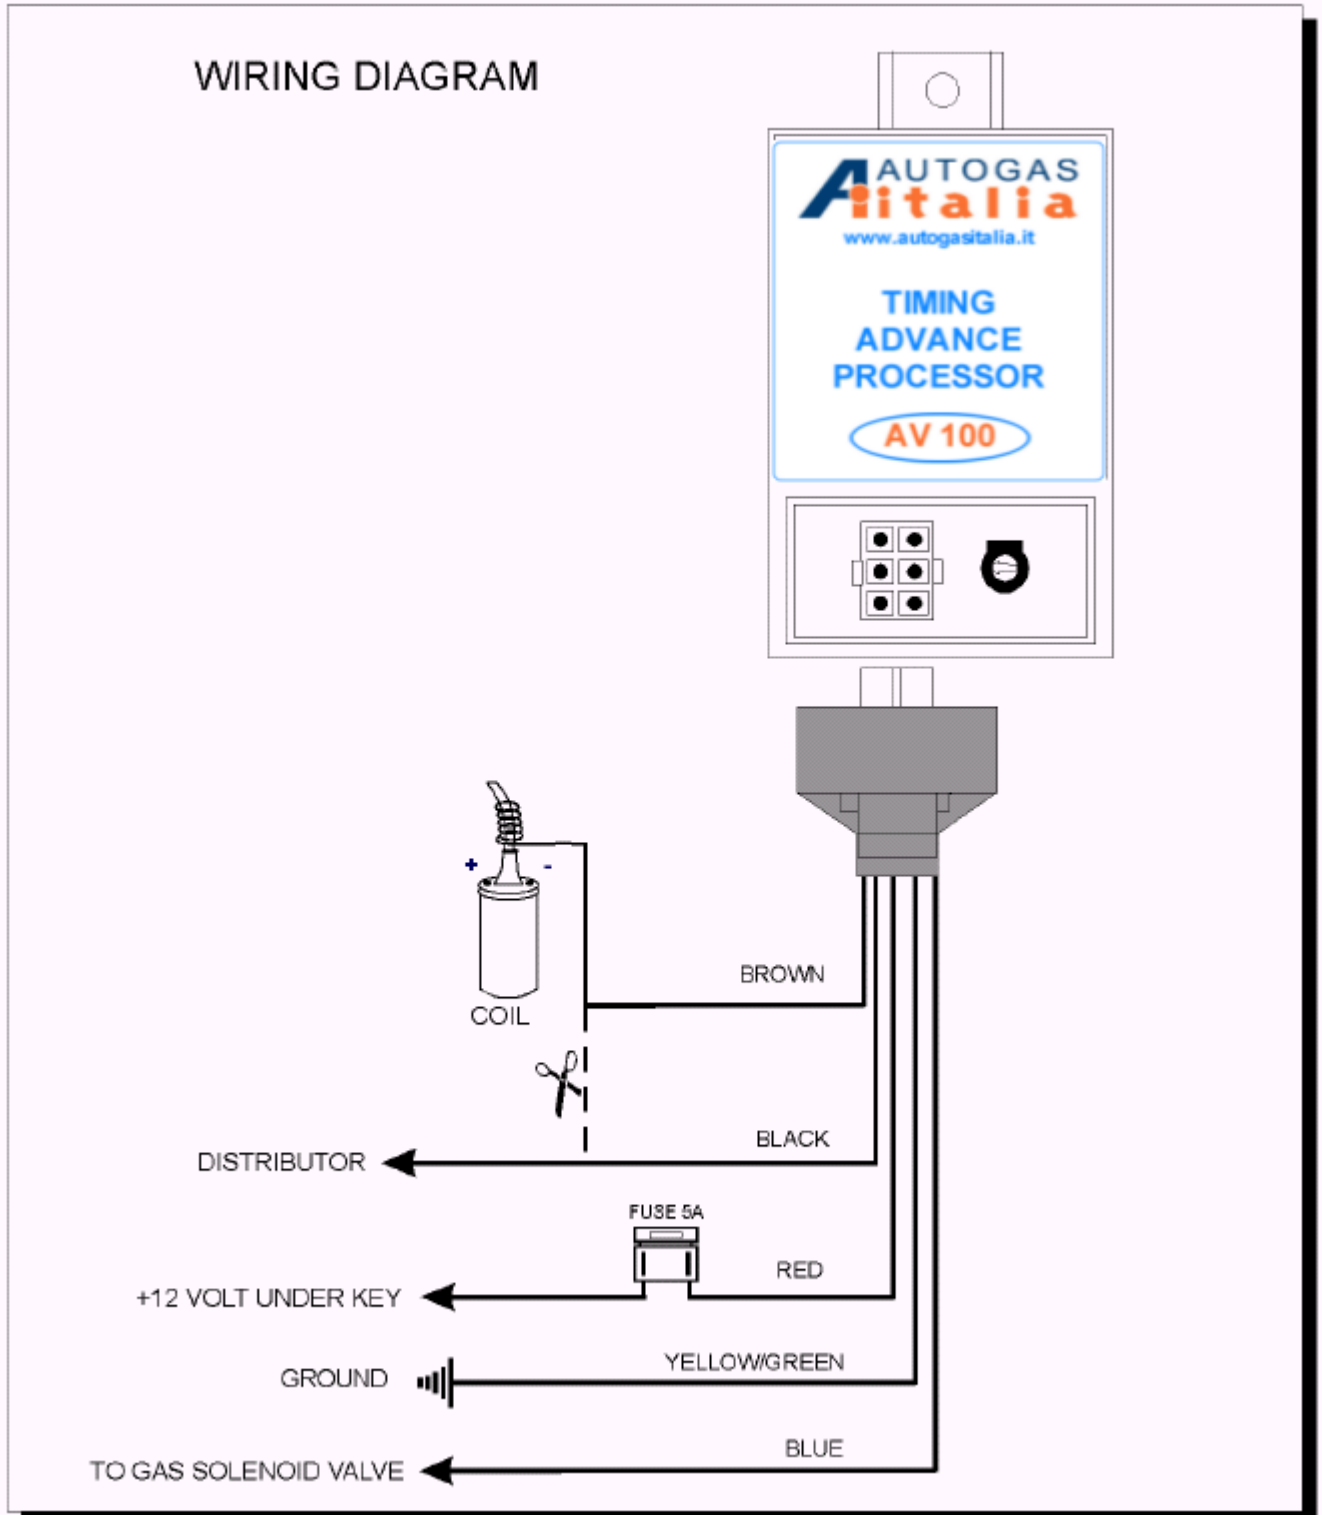

## SETTINGS

To set the advance proceed as follows:

- Make sure that the setting trimmer is turned completely in the counter clockwise direction,
- With the engine idling, fed on petrol, find out the original advance with the help of the stroboscopic gun,
- Loosen the distributor and rotate it advancing the ignition about 8 degrees and then block it again,
- With the engine always idling turn the advance setting trimmer clockwise until the original value has been restored,
- Change-over the switch to the gas position and set the carburation.


**NOTE:** This regulation don't change the previous setting with gas.

## EMERGENCY

In case of malfunction of the unit, remove the wiring harness connector and replace it with the supplied emergency connector .  
The AV-100 is now bypassed.

## WARNING

- Check that on the positive of the ignition coil there are 12 Volts. In case a lower value is found, connect the RED wire with another under-key position.
- Before installing the timing advance processor make sure that the breaker points are clean and in good condition.
- We recommend to install the AV-100 in upright position and far from any water infiltration and from any source of excessive heat.

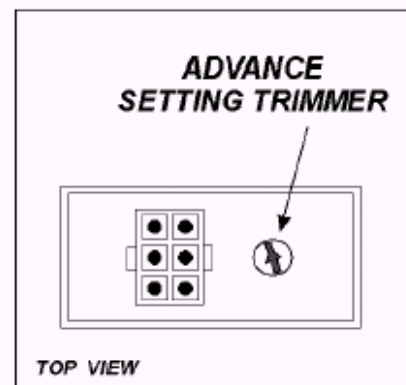

Pic.1